

Project Name: _____

Date: _____ Note: _____

LED WALL PACK - Watt Selectable



silicone ring



Application: security, pathway and perimeter lighting, building entryways, walkways and much more

Feature:


- IK08 prismatic glass cover lens
- Die-cast aluminum housing for best heat resistant
- Ingress Protection rating of IP65 for dust and water
- Enhanced surge protection: # Line-erth: 4KV; # Line-line: 6KV

Certifications




PRODUCT DIMENSION

Front View

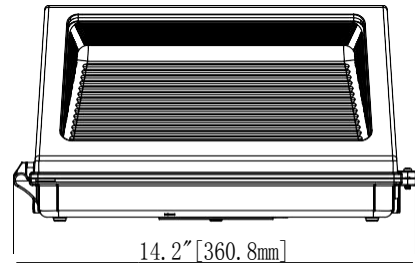

Side View

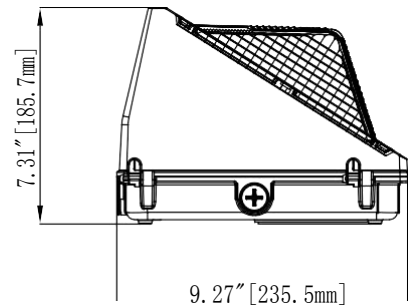

SPECIFICATIONS:

SKU	TCL-WP-60W/80W/100W-H-50K
Photocell	Pre-Installed
Wattage	60W/80W/100W
Rated Current	0.55A/0.734A/ 0.917A
Lumens	7,500/10,000/12,500
Lamp Bead Model	SEOUL 3030
Driver	SOSEN
Beam Angle	95°x105°
Lighting Efficiency	130 Lm/W
Color Rendering Index	Ra>80
Working Temperature	-4 °F ~+104 °F / -20 °C ~ +40 °C
Storage Temperature	-22 °F ~+122 °F / -30 °C ~ +50 °C
Environment Location	IP 65 - Wet Location
Lifespan	> 50000H
Lampshell	DARK BROWN
DLC ID	PL5486KJXHXE
Package Info	14.76" X 13.19" X 9.65"
P/C Master Pack	1
Weight	11.5LB

ORDERING CODE DEFINITION


EXAMPLE: TCL-WP-60W/80W/100W-H-50K

Company Code	Product	Power	CCT	Photocell Function
TCL	WP: LED Wall Pack Light	Watt Selectable: 60W / 80W / 100W	5000K	PC: With Photocell Installed


INSTALLATION INSTRUCTION

Watt Selectable and Pre-Installed Photocell

1. Unscrew with a screwdriver to remove the fixture upper part.

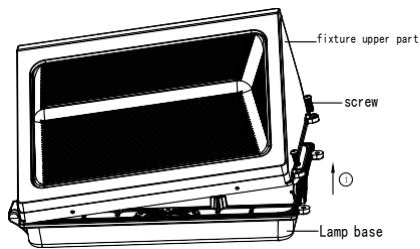


3. After selecting the wattage, lock the upper part by tightening screws into bottom case for the end.

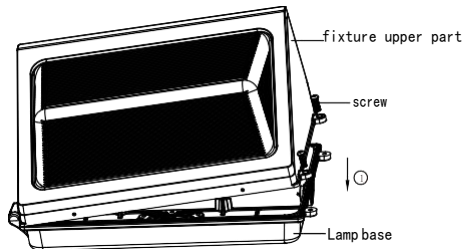


2. **Watt Selection:** Open the bottom case, set up wattage through internal DIP switches according to the markings. The default wattage position (centre) is 80W, dial up to 60W, dial down to 100W, dial centre to 80W. Users can dial to positions of required wattage.

Photocell Option: Photocell has been pre-installed on the fixture. If you would like to remove the photocell, you can unplug the connector and the photocell function will be disabled.

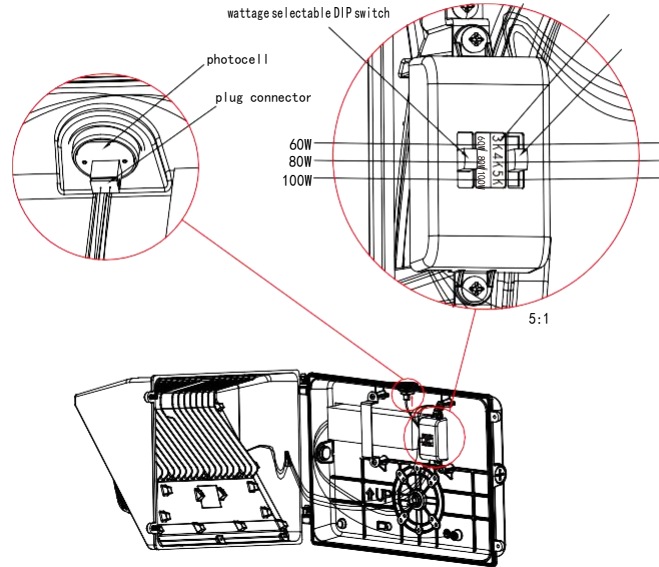

PHOTOMETRIC REPORT


LUMINOUS INTENSITY DISTRIBUTION DIAGRAM

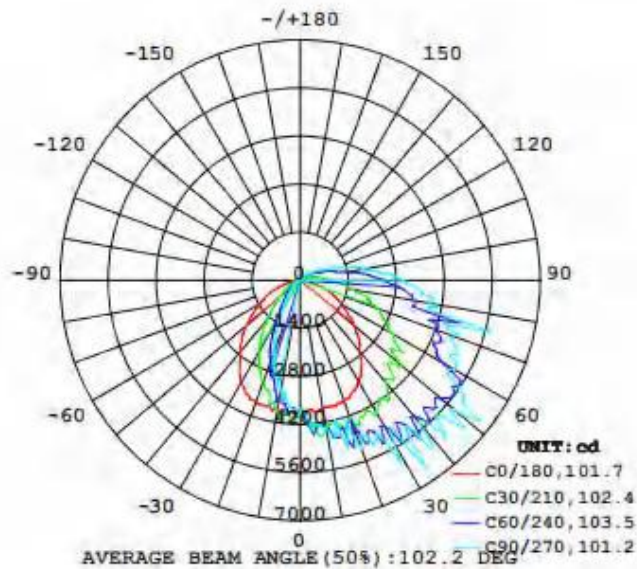


INSTALLATION INSTRUCTION

INSTALLATION


1. Use a screwdriver to unscrew the lamp screws and remove the upper half of the fixture.

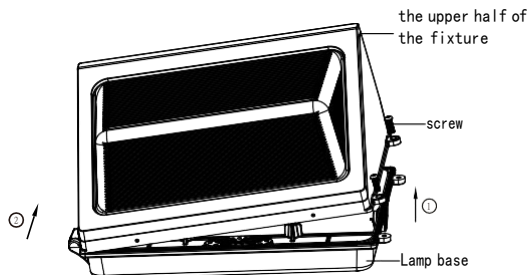


2. Unscrew the cover of the entry hole on the lamp base and remove the cover.

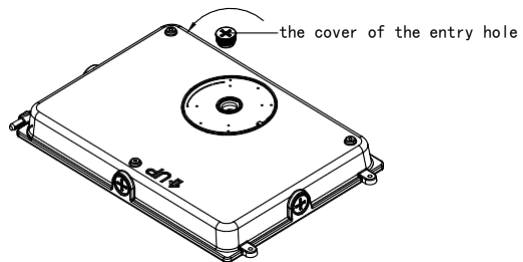


3. According to the embedded terminal box, punch the corresponding mounting hole on the light's mount.

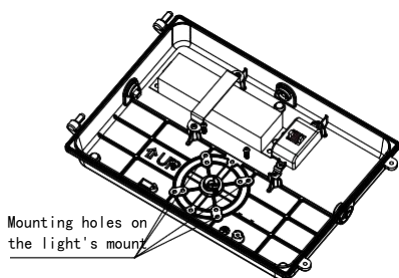


4. Put the input line in the embedded box passes through the waterproof pad and then passed through the lamp base.

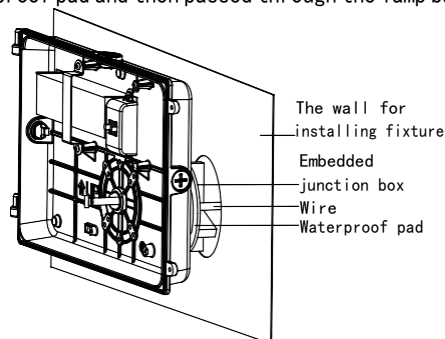

5. Use screw to lock the lamp base on the embedded junction box.

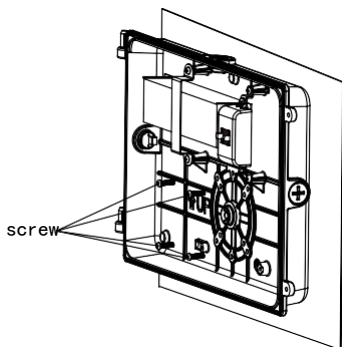

6. Connect the input wire and the dimming wire of the light, then put the connected wires into the embedded terminal box. Connect the output wires of driver with the wires of PCB board, adjust the switch to the color temperature and Wattage needed.

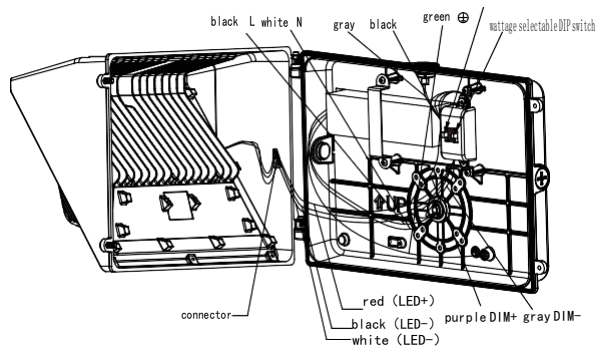

7. Use screws to lock the fixture. Installation completed.

